		FeiyuTech			Feiyu	SCORP-Mi	ni Came	ra Compa	atibilit	y (Cabl	e Control)			
Brand	Camera Model	Cable	Capture	Start/ Stop Recording	Playback	Shutter Speed	Aperture	IS0	Halfway Press	Pull Focus	Digital Zoom	Camera Firmware	Gimbal Firmware	Remark
	RX100 III (RX100M3)	Type-C to Multi	v v	Video √	~	×	×	×	To Focus √	×	√	Version 2.00	Version 1.01	
	RX100 IV (RX100M4) RX100 V (RX100M5)	Type-C to Multi Type-C to Multi	~	√ √	√ √	×××	×××	×××	√ √	×××	√ √	1.30 2.00	1. 01 1. 01	1. After connecting the cable, be sure to power on the SCORP-Mini before the camera.
	RX100 VA (RX100M5A)	Type-C to Multi	~	√ √	~	×	×	×	√ √	×	~	2.00	1.01	 Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom.
	RX100 VII (RX100M7)	Type-C to Multi	~	~	~	×	×	×	~	×	√	1.00	1. 01	 Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;
	ZV-1	Type-C to Multi	\checkmark	\checkmark	\checkmark	×	×	×	\checkmark	×	\checkmark	1.00	1.01	
	ZV-E10	Type-C to Type-C	V	~	V	×	×	×	×	×	×	1. 00	1. 01	 Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] Set"Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [PC Remote] → [On] Set"Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] Please set [Auto Review] to be"Off" when shooting the timelapse video or Panorama; After connecting the cable, be sure to power on the SCORP-Mini before the camera. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". When the camera is in photo mode, you can switch between photo and video modes from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	DSC-HX90	Type-C to Multi	~	\checkmark	\checkmark	×	×	×	\checkmark	×	\checkmark	1.00	1.01	
	DSC-WX500 a 5100	Type-C to Multi Type-C to Multi	~	√ √	√ √	× ×	× ×	× ×	~ ~	× ×	√ √	1.00 3.10	1. 01 1. 01	
	a 6000 a 6100	Type-C to Multi Type-C to Multi	~	√ √	√ √	×××	××	×××	√ √	××	√ √	1.00 1.00	1. 01 1. 01	 After connecting the cable, be sure to power on the SCORP-Wini before the camera. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable
Sony	a 6300	Type-C to Multi	~	~	~	×	×	×	~	×	\checkmark	2.00	1.01	Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama;
	a 6400 a 6500	Type-C to Multi Type-C to Multi	~	~	~	×	×	×	~	×	~	1.00 2.00	1. 01 1. 01	
	a 6600	Type-C to Multi	~	~	~	×	×	×	~	×	~	1.10	1.01	
	DSC-RX0 II	Type-C to Multi	\checkmark	~	\checkmark	×	×	×	\checkmark	×	\checkmark	1.00	1.01	
	α 7 Π (Α/Μ2) α 7S ΙΙ	Type-C to Multi	~	√ √	~ ~	×	×	×	~	×	~	2.00	1. 01	1. After connecting the cable, be sure to power on the SCORP-Mini before the camera. 2. Support Optical Zoom; Please set [Zoom Setting] to
	a 7R II a 7S	Type-C to Multi Type-C to Multi	~	√ √	√ √	×	×	×	~	××	لم ب	4. 00 3. 20	1. 01 1. 01	be "Clearlmage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting
	a 7R a 7 A7 111	Type-C to Multi	~	~	~	×	×	×	~	×	~	2.00	1.01	the timelapse video or Panorama;
		Type-C to Multi	~	~	~	×	×	×	~	×	√	3. 00	1.01	
	A 7C	Type-C to Type-C	~	~	~	×	×	×	~	×	×	1. 00	1. 01	 After connecting the cable, be sure to power on the SCORP-Mini before the camera. Please set the [Ctrl w/ Smartphone] to be off. (Network) → [Ctrl w/ Smartphone] → [Off] Set "USB Connecting" to be "PC Remote": (Network) → [PC Remote Function] → [PC Remote] → [On] Set "Still Img. Save Dest." to be "Camera Only": (Network) → [PC Remote Function] → [Still Img. Save Dest.] → [Camera Only] Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama; Support Switch Photo/ Video Mode in P, A, S, M, AUTO Mode.
	a 78 III	Type-C to Multi	~	~	\checkmark	×	×	×	\checkmark	×	\checkmark	2. 1	1. 03	 Please switch photo / video mode on camera manuall Switch to "MF" Mode on the lens when use pull focu After connecting the cable, he sure to power on the
	a 75 III	Type-C to Type-C	\checkmark	\checkmark	\checkmark	\checkmark	×	\checkmark	\checkmark	×	×	2. 1	1.03	gimbal before the camera. 2. Operate digital zoom, the camera's digital zoom function needs to be turned on.
		Turc-C to Multi	,	,		~	~	~	1	~	1	1 01	1.05	Tunction needs to be turned on. 1. After connecting the cable, be sure to power on the gimbal before the camera.
		Type-C to multi	~	v	~	^	^	^	Ň	^	V	1.01	1.05	2.Operate digital zoom, the camera's digital zoom function needs to be turned on.
	A7M4	Type-C to Type-C	V	V	V	V	V	V	Ą	×	×	1. 01	1. 05	1. Please set the [Ctrl w/ Smartphone] to be off: (Network) \rightarrow [Ctrl w/ Smartphone] \rightarrow [Off] 2. Set "USB Connecting" to be "PC Remote": (Network) \rightarrow [PC Remote Function] \rightarrow [PC Remote] \rightarrow [On]Set the "USB Connection" to be "Computer Remote". The specific setting method is as follows: Step 1: Set the computer remote control on the camera. MENU network transmission/remote Computer remote control function computer remote control open 3. When using the electronic focusing function of the camera, you need to set the lens mode to AF and camera mode to MF. 4. Settings to avoid losing photos when taking photos: Network \rightarrow Transfer/Remote \rightarrow PC Remote Control \rightarrow Still Img. Save Dest. \rightarrow Camera only.
Brand	Camera Model	Cable	Capture	Start/ Stop Recording	Playback	Shutter Speed	Aperture	ISO	Halfway Press	Pull Focus	Digital Zoom	Camera Firmware	Gimbal Firmware	Remark
	EOS MEO		Photo	Video		Adjustment	Adjustment	Adjustment	To Focus	~	Gontrol	Version	Version	
Canon	EOS M50	lype-C to Micro	~	~	~	~	~	~	×	×	×	1. 0. 0	1.02	 SCORP-Mini can switch to video mode from P, A, M shooting mode, but need to switch to video mode from photo mode on camera manually.
	EOS M50 Mark	Type-C to Micro	\checkmark	\checkmark	\checkmark	×	×	×	×	\checkmark	×	1. 0. 0	1.01	 Switch to "MF" Mode on the lens when use pull focus. When shooting timelapse video, please set the Canon camera "Image Review" to be off
														1 SCORP-Mini can switch to video mode from P A
	EOS R	TypeC to TypeC	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	×	\checkmark	\checkmark	×	1. 8. 0	1. 01	shooting mode, but need to witch to video mode from photo mode on camera manually. 2. Switch to "MF" Mode on the lens when use pull focus.
	EOS RP EOS M6	Type-C to Type-C Type-C to TRS2.5	J J	ب ×	J	×	×	×	× ~	√ ×	×	1. 3. 0	1. 01	 Please do not use the release cable to control the video recording while in photo mode camera as it is easy to cause the camera crash. When shooting timelapse video, please set the Canon camera "Image Review" to be off. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS M6 Mark	Type-C to Type-C	\checkmark	2				~	×	,	~	1 0 0	1 01	1. SCORP-Mini can switch to video mode from P,A,M shooting mode, but need to switch to video mode from photo mode on camera manually.
		Type o to Type o	v	Ň	Ň	v	Ŷ	v	~	v	~	1.0.0	1.01	 Switch to "MF" Mode on the lens when use pull focus. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D (250D)	Type-C to Micro	\checkmark	~	\checkmark	\checkmark	\checkmark	\checkmark	×	\checkmark	×	1. 0. 0	1.03	1. Please switch photo / video mode on camera manually.
	Powershot G7 X Mark III	Type-C to Type-C	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	×	\checkmark	×	1. 0. 1	1. 01	 Switch to "MF" Mode on the lens when use pull focus. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS R6	Type-C to Type-C	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	×	\checkmark	×	1. 4. 0	1.04	 Please switch photo / video mode on camera manually. Switch to "WF" Mode on the lens when use pull focus.
	EOS P7	Type-C to Type-C									*	1.0.1	V1_05	
			~	~ /	~	~	~	~		~	~	1.0.1	V1.05	
			Capture	Start/ Stop		Shutter Speed	Aperture	150	Halfway		Digital Zoom	Camera	Gimbal	
Brand	Camera Model DC-G9GK-K	Cable Type-C to DC2.5mm	Photo √	Recording Video √	Playback √	Adjustment ×	Adjustment ×	Adjustment ×	Press To Focus √	Pull Focus	Control ×	Firmware Version 2.00	Firmware Version 1.01	Remark Please switch photo / video mode on camera manually.
	DMC-GH4GK	Type-C to DC2.5mm	\checkmark	~	\checkmark	×	×	×	~	×	×	2. 70	1.01	Please switch photo / video mode on camera manually.
Panasonic	DMC-GH5S	TypeC to TypeC	V	√ Start/ Star	J	×	×	×	X	~	×	1. 2	1. 01	 Set the USB Mode to be PC(tether) on camera. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. The camera will auto focus when control capture photo. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
Brand	Camera Model	Cable	Capture Photo	Recording Video	Playback	Snutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Press To Focus	Pull Focus	Vigital Zoom Control	Firmware Version	Firmware Version	Remark
Fujifilm	X-T20 X-T30	Type-C to TRS2.5 Type-C to TRS2.5	√ √	√ √	√ √	×	×	×	√ √	×	×	2. 01 1. 20	1. 01 1. 01	 Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu Please switch photo / video mode on correct
	X-T30 II	Type-C to TRS2.5	\checkmark	~	\checkmark	×	×	×	\checkmark	×	×	1.00	1.01	manually.
	X-T100	Type-C to TRS2.5	\checkmark	×	\checkmark	×	×	×	\checkmark	×	×	2. 00	1. 01	the [MOVIE SETTING] menu 2、 Please switch photo / video mode on camera manually.
	X-T200	Type-C to TRS3.5	\checkmark	\checkmark	\checkmark	×	×	×	\checkmark	×	×	1. 00	1. 01	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A5	Type-C to TRS2.5	~	×	\checkmark	×	×	×	~	×	×	2. 00	1. 01	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	X-A7	Type-C to TRS2.5	~	×	~	×	×	×	~	×	×	1. 30	1. 01	2、 Please switch photo / video mode on camera manually.
	Х-ТЗ	Type-C to TRS2.5	\checkmark	\checkmark	\checkmark	×	×	×	\checkmark	×	×	3. 01	1.01	 Make sure to connect Feiyu SCORP to the camera ø2.5mm port. Please switch photo/ video mode on camera manually.
	Х-Т4 Х-н1	Type-C to TRS2.5	~	√ _/	~/	×	×	×	~/	×	×	1.00	1.01	
	X-S10	Type-C to TRS3.5 (Optional)	√	~	√	×	×	×	√	×	×	1. 00	1. 01	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	Х-ЕЗ	Type-C to TRS2.5	~	~	~	×	×	×	~	×	×	1. 22	1. 01	a, rease switch photo / video mode on camera manually. 1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under
	X100V	Type-C to TRS2.5	\checkmark	\checkmark	\checkmark	×	×	×	\checkmark	×	×	2. 00	1. 02	the [MOVIE SETTING] menu 2、 Please switch photo / video mode on camera manually.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
	Z50	Type-C to micro	\checkmark	\checkmark	V	×	×	×	×	×	×	1. 02	1. 01	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2、 Please switch photo / video mode on camera manually.
Nikon	Z fc	Type-C to Type-C	~	~	~	×	×	×	×	~	×	1. 10	1. 01	 Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu Please switch photo / video mode on camera manually. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
	Z6 Z6	TypeC to TypeC TypeC to TypeC	√ √	√ √	√ √	×	× ×	×	×	×	× ×	2.00 1.00	1. 01 1. 01	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu
	Z7 Z7	TypeC to TypeC TypeC to TypeC	\checkmark	√ √	√ √	×	×	×	×	××	×	3. 31 1. 00	1.01 1.01	ει riease switch photo / video mode on camera manually
	Z5 Z30	Type-C to Type-C	~	~	~	×	×	×	×	×	×	1. 11	1. 05	 After connecting the cable, be sure to power on the SCORP-Mini before the camera. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on Please switch photo / video mode on camera manually. A. If you go back to the album and play the video, you have to reconnect to control it again. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on Please switch photo / video mode on camera manually. Please switch photo / video mode on camera manually.
														to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment	Aperture Adjustment	ISO Adjustment	Halfway Press To Foor	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimbal Firmware Version	Remark
SIGMA	FP	TypeC to TypeC	×	video √	×	×	×	×	X	×	×	version 4.00	version	 Select "Camera Control" for USB mode; All keys of the camera are unavailable after the connection with the SCORP-Mini

Notice. 1. "" \/"" Means Support this function, "×" Means Do not Support; 2. When connecting by Type C to TRS3.5, Type C to TRS2.5 and USB2.0 to Mini USB, the camera icon on the gimbal screen will not light up.long press the shutter button to take photos or record videos, the camera required to be in corresponding mode."