 
 


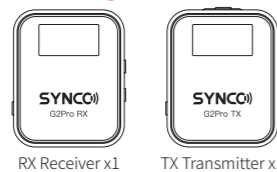

## Caring For Your SYNCO Product

- Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat source away from the product to prevent mechanics damage.
- Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, impact of external force.
- Do not attempt to disassemble the product. Doing so voids warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happened.
- Failure to follow all the instructions may result in mechanics damage.
- Warranty does not apply to human errors.

 
## Package List

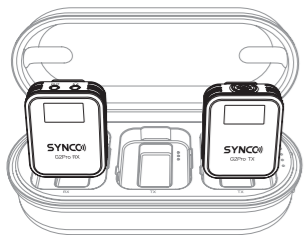


RX Receiver x1 TX Transmitter x1



Carring & Charging Box x1



Type-C to Type-C Cable x1

 


Type-C to USB-A Adapter X1



3.5mm TRRS Phone Cable x1



 Mic Windshield x1



External Lav Mic (With Wind Muff) x1



3.5mm TRS Camera Cable x1




User Manual X1

## Microphone G2A1 Pro

 User Manual


Thank you for choosing SYNCO product. Please read this manual carefully before use and follow all instructions mentioned herein.

## Product Instruction

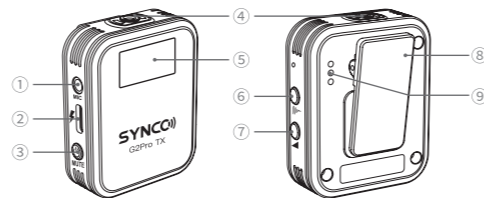


### 1. TX Transmitter

 - ① External Mic Input
- ② Type-C Charging Port
- ③ On/ Off Button
- ④ Built-in Mic
- ⑤ Display Screen
- ⑥ Noise Reduction
- ⑦ Gain Adjustment of TX
- ⑧ Magnet Pocket Clip
- ⑨ Contacts

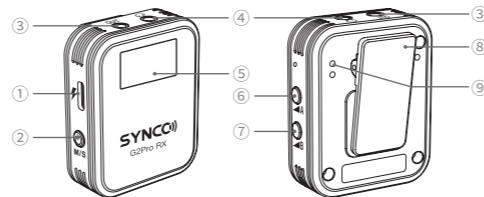

### 2. RX Receiver

 
- ① Type-C Charging Port / Digital Output
- ② On/ Off Button (Mono / Stereo / Safety Channel)
- ③ 3.5mm TRS Output
- ④ 3.5mm Monitoring Port
- ⑤ Display Screen
- ⑥ Gain Adjustment of TX A
- ⑦ Gain Adjustment of TX B
- ⑧ Magnet Pocket Clip
- ⑨ Contacts

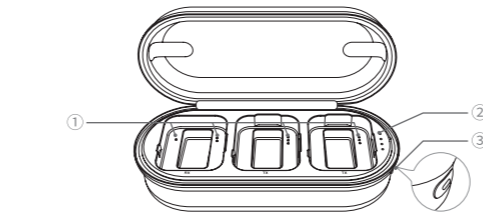

### 3. Carrying & Charging Case

- ① Contacts
- ② Power Indicator
- ③ Type-C Port
 
### 4. Display Screen

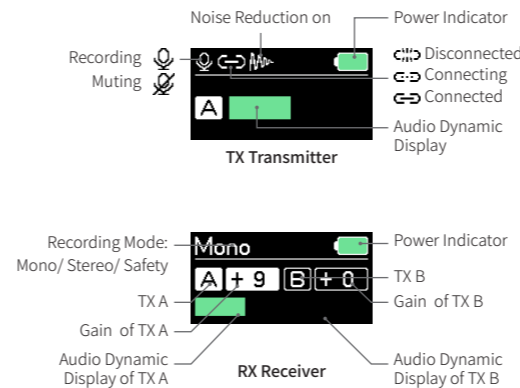

## Operations

### 1. Power On/ Off

#### Power On


**Method 1:** The TX and RX automatically turn on after taken out from the charging Case.

**Method 2:** The TX and RX automatically turn on when long press the power button for 3 seconds, and the display screen lights up.

#### Power Off

**Method 1:** After put the transmitter/receiver into the charging box, the display screen shows [charging] and enters automatic charging. After fully charged, the display screen goes out and automatically power off.

 **Method 2:** The TX and RX automatically turn off when long press the power button for 3 seconds, and the display screen lights off.

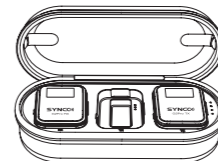

### 2. Pairing

#### Automatic Pairing

Automatically pairing after the TX/RX turns on when taken out from the charging case.

#### Manual Pairing

① Long press the transmitter and receiver at the same time for 3 seconds to power off.

② After shutdown, long press the power button of the transmitter and receiver for 8 seconds at the same time to enter the [connecting] state.



Disconnected Connecting

③ Successfully Connected show as the picture

 


\***Note:** Before successful connection, the transmitter channel displays A by default. The transmitter connected to the receiver first is the transmitter A, and the later one is the transmitter B.

### 3. Channel output connection

#### ① 3.5mm OUT output


The receiver outputs the audio signal to the recording device via either a 3.5mm TRRS phone cable or a 3.5mm TRS camera cable. Please use the appropriate cable according to your device.

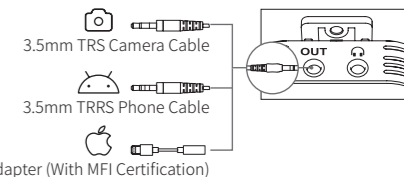

\***Note:** When using an external microphone, please insert it correctly into the microphone input jack. Only TRS interface microphones are supported.

#### ② Type-C port digital output

 The receiver Type-C port has a digital output function, which can directly use the Type-C to Type-C cable to output mobile phones or computers and other devices.

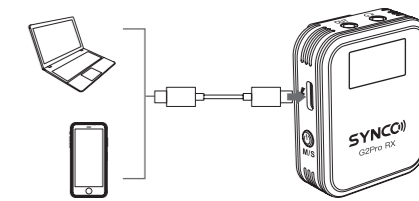


\*Note: When connecting the computer, enter the sound Settings and set the input microphone to SYNCO G2Pro to use G2 recording; Set the output speaker to SYNCO G2 Pro to use real-time ear return in the receiver listening interface.



#### 4. Real-time monitoring

 The 3.5mm monitoring port of the receiver supports digital monitoring, which can simultaneously monitor the sound source of the transmitter and the input sound source of the device.




#### 5. Volume Control

- Press the power button on the TX to turn on/off the mute.
- Short press the gain adjustment button of the TX to adjust the volume for 6 levels (0-3-6-9-12-15).
- Short press the gain adjustment of A/B TX buttons on the RX to adjust the volume of A/B TX.

#### 6. Noise Reduction

 Short press the noise reduction button on the TX to turn on/off the noise reduction function.

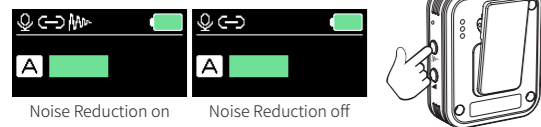

#### 7. Switch the Channel Mode

Short press the power button on the RX to switch the mono/stereo/safety channel mode.  
Default mono mode.

#### 8. Charging

- Connect the charging cable through the Type-C port to charge the charging case, and fully charged about 3.5 hours.
- The TX/RX: Automatically charge through the contact point of the charging case after put into the charging case.
- Connect the charging cable through the Type-C port of the receiver and the transmitter, and fully charged in about 2 hours.

#### 9. Mic Windshield & Device Installation

 


#### 10. Setting The Recording Level Correctly

Camera devices generally have poor-quality, noisy preamps. In order to get the cleanest signals possible, it is highly recommended that you set the recording level on your camera quite low, 1/2 or 1/3 of it. G2 provides variable gain control, allowing you to tailor your levels to just about environment and recording device.


#### Adjust the recording level of inbuilt mics for SONY Camera

(Take A7S II for example)

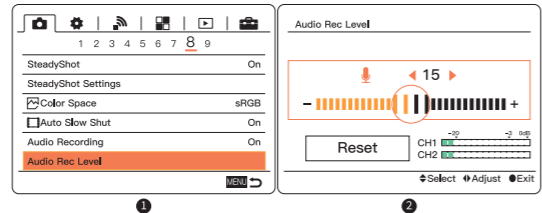


#### Adjust the recording level of inbuilt mics for Canon Camera

 (Take EOS 5D Mark IV for example)

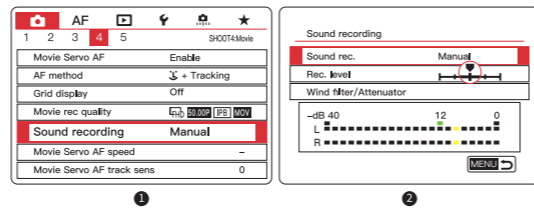

#### Adjust the recording level of inbuilt mics for Panasonic Camera

 (Take LUMIX GH5 for example)

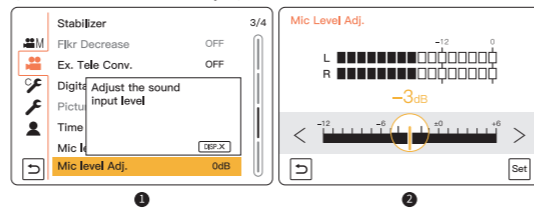

## Specifications

#### TX Transmitter

Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz
Working Distance	656ft/200m (LOS area), 164ft/50m (NLOS area)
Mounting	Pocket Clip
Audio Input	3.5 mm TRS Mic Input
Power Requirements	5V 1A
Battery Type	Built-in Lithium Battery, 400mAh
Battery Charging Time	2H
Battery Life	8H
Display Screen	TFT Screen
Dimensions	52X42X17mm

Material	ABS
Weight	39g

#### RX Receiver

Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz
Working Distance	656ft/200m (LOS area) 164ft/50m (NLOS area)
Latency	20ms
Mounting	Pocket Clip
Number of Audio Channels	2
Audio Output	3.5 mm TRS Mic Output 3.5 mm TRS Headphone Output Type-C Output
Volume Adjustment	6 levels (0-3-6-9-12-15)/(0~30dB)
Power Requirements	5V 1A
Battery Type	Built-in Lithium Battery, 400mAh
Battery Charging Time	2H
Battery Life	8H
Display Screen	TFT Screen
Dimensions	52X42X17mm
Material	ABS
Weight	39g

#### Microphone

Form Factor	Built-in/External Mic
Frequency Range	50Hz-20KHz
Sensitivity	-40dB (±3dB, re 1V/Pa at 1 KHz)
Maximum SPL	120dB SPL (at 1KHz)

#### Charging Case

Battery Type	3400mAh
Battery Charging Time	3.5H
Charging Port	Type-c
Power Requirement	5V 1A
Dimension	170*80*50mm
Weight	227g

## Warranty

#### Warranty Period

Thank you for purchasing SYNCO products.

- Customers are entitled to free replacement or repair service in case of quality defect(s) found in the product under normal use within 30 days upon receipt of the product.
- Original SYNCO products are entitled to 12-month limited warranty service. The warranty period begins on the date of purchase of brand new, unused products by the first end-user.

Within the warranty period, if product defect or failure is attributable to material deflection or technological problem, the defective product or defective part will be repaired or replaced without charge (service and materials fee).

#### Warranty Exclusions and Limitations

Faults resulted from inappropriate use of a product without following its operation specification:

- Artificial damage, e.g. crash, squeeze, scratch, or soaking
- Modifications to a product by its user or a third party without prior written consent of SYNCO, e.g. replacement of element or circuit, label alteration
- The code on product is inconsistent with that of warranty certificate, or the code on the product or warranty certificate is altered or torn off
- All consumable accessory attached to a product, like cable, wind muff, battery
- Faults as a result of force majeure, such as fire, flood, lightning, etc.

#### Warranty Claim Procedure

- If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact SYNCO's customer service through email at support@syncoaudio.com.
- Please retain your sales receipt and warranty certificate as proof of purchase. If any of these documents is missing, only sales return or chargeable service will be provided.
- If the SYNCO product is out of the warranty coverage, the service and the parts cost will be charged.

## WARRANTY CERTIFICATE

Product Model: \_\_\_\_\_  
 Date of Purchase: \_\_\_\_\_  
 Serial Number: \_\_\_\_\_  
 Malfunction Description: \_\_\_\_\_  
 Buyer Name: \_\_\_\_\_  
 Buyer Telephone: \_\_\_\_\_  
 Buyer Mail: \_\_\_\_\_  
 Buyer Address: \_\_\_\_\_  
 Dealer: \_\_\_\_\_  
 Dealer Telephone: \_\_\_\_\_

Delivery Date: \_\_\_\_\_  
 Cause of Malfunction: \_\_\_\_\_  
 Maintenance Personnel: \_\_\_\_\_  
 Malfunction Processing: \_\_\_\_\_

\*Please register your warranty. Meanwhile, you are welcomed to contact us via Email: support@syncoaudio.com

#### Guangzhou Zhiying Technology Co., Ltd

Room 2401, 24 / F, South Tower, Lisheng Plaza, No. 68 Huadi Avenue, Liwan District, Guangzhou, China, 510000  
 support@syncoaudio.com  
 www.syncoaudio.cn