



Feiyu SCORP-C Camera Compatibility

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimble Firmware Version	Remark
Sony	RX100 III (RX100M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 2. Support Optical Zoom; Please set [Zoom Setting] to be "ClearImage Zoom" or "Digital Zoom" to enable Digital Zoom. 3. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 4. Please set [Auto Review] to be "Off" when shooting the timelapse video or Panorama. 5. After connecting the cable, be sure to power on the Feiyu SCORP before the camera. 6. The camera icon on the gimbal screen lights up after a successful connection. And the screen of the camera displays the characters "PC". 7. When the camera is in photo mode, you can switch between photo and video mode from gimbal; when the camera is in video mode, the gimbal can only control recording video.
	RX100 IV (RX100M4)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.30	Gimbal_V101	
	RX100M5A	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	RX100 VI (RX100M6)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	RX100 VII (RX100M7)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	ZV-1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V101	
	DSC-WX500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V101	
	DSC-HX90	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V101	
	DSC-RX10 III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.0	Gimbal_V101	
	DSC-RX10 IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	ZV-E10	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	
	a6100	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
	a6300	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101	
	a6400	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101	
a6500	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
a6600	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	Gimbal_V101		
A7S	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.20	Gimbal_V101		
a7S II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
A7R	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	2.00	Gimbal_V101		
a7R II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101		
a7R III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.01	Gimbal_V101		
a7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101		
a7R IV	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V101		
a7R IMA	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V101		
a7 II (A7M2)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	4.00	Gimbal_V101		
a7 III (A7M3)	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.10	Gimbal_V101		
a9	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	6.00	Gimbal_V101		
a9 II	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	3.00	Gimbal_V101		
A7C	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0	Gimbal_V101		
a1	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101		
a7S III	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.01	Gimbal_V101		
a7S III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.01	Gimbal_V101		
FX3	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101		
FX3	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V101		
A7M4	TypeC to TypeC	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.00	Gimbal_V101		
A7R IV	Type-C to Multi	✓	✓	✓	✗	✗	✗	✓	✗	✓	1.10	Gimbal_V103		
FDR-AX60	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V104		
FDR-AX700	Type-C to Multi	✗	✓	✓	✗	✗	✗	✓	✗	✓	1.00	Gimbal_V104		

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimble Firmware Version	Remark
Canon	EOS M50	Type-C to micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.0	Gimbal_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS M50 Mark II	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	2. switch to "MF" Mode on the lens when use pull focus. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS M6 Mark II	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✗	✗	1.0.0	Gimbal_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 2. when using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need. 3. When shooting timelapse video, please set the Canon camera "Image Review" to be off 4. Turn off the Camera Wi-Fi before use the cable to control camera
	Powershot G7 X Mark III	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.1	Gimbal_V101	1. Be sure camera Wi-Fi is off before connecting the cable 2. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur. 3. Switch to "MF" Mode on the lens when use pull focus. 4. When shooting timelapse video, please set the Canon camera "Image Review" to be off
	EOS 200D II (250D)	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V101	
	EOS 850D	Type-C to micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V101	
	EOS 80D	Type-C to mini (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.2	Gimbal_V101	
	EOS 90D	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.0.0	Gimbal_V101	1. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.
	EOS 6D	Type-C to mini (Optional)	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.8	Gimbal_V101	2. when using the gimbal to control focus electronically, you may need to switch the lens between AF and MF to see which best fits your need.
	EOS 6D Mark II	Type-C to mini (Optional)	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V101	3. When shooting timelapse video, please set the Canon camera "Image Review" to be off. 4. EOS 90D/EOS 200D camera needs to be powered on in photo mode, otherwise the camera screen may not display.
	EOS 5D Mark III	Type-C to mini (Optional)	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.5	Gimbal_V101	
	EOS 5D Mark IV	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.2	Gimbal_V101	
	EOS 5DS R	Type-C to micro	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V101	
	EOS RP	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.3.0	Gimbal_V101	1. Please switch photo / video mode on camera manually. 2. switch to "MF" mode on the lens when use pull focus. 3. Please do not use the release cable to control the video recording while in photo mode in R/R5/R5c camera as it is easy to cause the camera crash.
	EOS R	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0	Gimbal_V101	4. When shooting timelapse video, please set the Canon camera "Image Review" to be off.
	EOS RS	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.1.1	Gimbal_V101	5. It shows that using the adapter with the EF Mount Lens will increase the delay of pull focus.
	EOS R6	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.1.1	Gimbal_V101	6. If connect camera to external device via HDMI Cable, need to set the "EMV Disposal" to be display both on camera screen and on the other device to control capture photo or video recording.
	EOS R5C	TypeC to TypeC	✓	✓	✓	✓	✓	✓	✗	✓	✗	1.0.0.1	Gimbal_V1.03	1. After the gimbal and camera are turned on, you need to wait about 10 seconds to establish a connection 2. When the camera is in photo file, the gimbal can control taking and recording. 3. When the camera is in video file, the gimbal can control recording 4. When you look back at a video, you have to switch to photo, and when you look back at a video, you have to switch to photo.
EOS R7	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0.1	Gimbal_V1.04		
EOS R10	Type-C to Type-C	✓	✓	✓	✓	✓	✓	✓	✗	✗	1.0.1	Gimbal_V1.04		
Panasonic	GH5S	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH5	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.60	Gimbal_V101	When switched to Photo mode, the camera won't respond to video-capturing commands; when switched to video mode, the camera won't respond to photo-capturing commands.
	GH5	TypeC to TypeC	✓	✓	✓	✗	✗	✗	✗	✓	✗	2.60	Gimbal_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF. 5. When the camera is connected to the gimbal, if you open the album and do nothing, the camera may freeze.
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.70	Gimbal_V101	
	GH4	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	1. Please switch photo / video mode on camera manually.
	GH5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.
GH6	Type-C to DC2.5mm	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Gimbal_V103	Please switch photo / video mode on camera manually.	
GH6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.20	Gimbal_V103	1. Set the USB Mode to be PC(ether) on camera. 2. Turn off the Camera Wi-Fi before use the cable to control camera as Wi-Fi and USB Trigger can not used at the same time. 3. The camera will auto focus when control capture photo. 4. To pull focus with gimbal, the focus mode toggle on the camera should be set to MF.	

Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimble Firmware Version	Remark	
Nikon	Z7	Type-C to Type-C	✓	✓	✗	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101	1. After connecting the cable, be sure to power on the Feiyu SCORP before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually.	
	Z7 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z5	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V101		
	Z6	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	2.00	Gimbal_V101		
	Z6 II	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z50	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✗	✗	1.00	Gimbal_V101		
	Z fc	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V101	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
	D7500	Type-C to micro	✓	✓	✗	✗	✗	✗	✗	✓	✗	1.10	Gimbal_V104	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Control the camera with the gimbal, the camera Live View function needs to be enabled 3. Gimbal can control camera recording only when the camera is turned on in video recording mode 4. The camera screen does not show the duration of the video, but only lights 5. The camera button is unavailable when connected to the gimbal 6. When controlling the electronic focus, the lens needs to be in AF mode and is slow	
	D850	Type-C to micro	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.2	Gimbal_V104	1. After connecting the cable, be sure to power on the gimbal before the camera and wait for about 6 seconds to hear the "click" sound for successfully connection after camera power on 2. Control the camera with the gimbal, the camera Live View function needs to be enabled 3. Gimbal can control camera recording only when the camera is turned on in video recording mode 4. If you go back to the album and play the video, you have to reconnect to control it again.	
	Z30	Type-C to Type-C	✓	✓	✓	✗	✗	✗	✗	✓	✗	1.00	Gimbal_V104	1. After connecting the cable, be sure to power on the Feiyu gimbal before the camera and wait for about 6 seconds for successfully connection after camera power on 2. Please switch photo / video mode on camera manually. 3. To operate digital focusing in video mode, you need to set the camera's focusing mode to AF-FS or AF-FC. When operating digital focus in photo mode, the focus mode of the camera cannot be MF mode.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimble Firmware Version	Remark	
Fujifilm	X-T20	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. After switch to video mode on camera manually, The Feiyu SCORP can control camera to start recording.	
	X-T30	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101		
	X-A5	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu	
	X-A7	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101		
	X-T100	Type-C to TRS2.5	✓	✗	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V101		
	X-H1	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.01	Gimbal_V101		
	X-T3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	3.01	Gimbal_V101	1. Make sure to connect Feiyu SCORP to the camera ø2.5mm port. 2. Please switch photo/ video mode on camera manually.	
	X-T4	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101		
	X-S10	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.02	Gimbal_V101	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu 2. Please switch photo/ video mode on camera manually.	
	X-T200	Type-C to TRS3.5 (Optional)	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V101		
	X-E3	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.22	Gimbal_V101		
		X-T30 II	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. Please switch photo/ video mode on camera manually.
		X100V	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	2.00	Gimbal_V103	1. Please set [MIC/REMOTE RELEASE] to be [REMOTE] under the [MOVIE SETTING] menu. Specific operations: Enter the setting interface, video Settings >Microphone/Remote shutter Settings>remote control 2. After switch to video mode on camera manually, The Feiyu SCORP can control camera to start recording.
	GFX 100S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.32	Gimbal_V104	1. Please switch photo/ video mode on camera manually.	
	X-H2S	Type-C to TRS2.5	✓	✓	✓	✗	✗	✗	✓	✗	✗	1.00	Gimbal_V104	1. Please switch photo/ video mode on camera manually.	
Brand	Camera Model	Cable	Capture Photo	Start/ Stop Recording Video	Playback	Shutter Speed Adjustment (Via APP)	Aperture Adjustment (Via APP)	ISO Adjustment (Via APP)	Halfway Press To Focus	Pull Focus	Digital Zoom Control	Camera Firmware Version	Gimble Firmware Version	Remark	
SIGMA	FP	TypeC to TypeC	✗	✓	✗	✗	✗	✗	✗	✗	✗	4.00	Gimbal_V103	1. The camera icon on the gimbal screen lights up after a successful connection. 2. When the cable is connected, the camera button function cannot be used. 3. When taking photos or recording video from the gimbal, it is recommended to manually set the camera to the corresponding mode, otherwise control failure may occur.	

Notice:

1. "✓" Means Support this function, "✗" Means Do not Support;

2. When connecting by Type C to TRS3.5, Type C to TRS2.5 and USB2.0 to Mini USB, the camera icon on the gimbal screen will not light up, long press the shutter button to take photos or record videos, the camera required to be in corresponding mode.