

封面

折疊线

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

V1.0



正面

Важные замечания по безопасности!

Установка
Чтобы достичь наилучшего эффекта, используйте проектор в более тёмной комнате или закройте шторы. Будьте осторожны при использовании проектора. Любая падение или удар могут привести к повреждению деталей, разрыву кабелей или неправильному отображению.

Источники питания

Будьте осторожны при использовании сетевого кабеля, чтобы избежать электрического удара. Последовательный сетевой кабель может вызвать электротравму и пожар. Пожалуйста, будьте осторожны при использовании этого устройства. Поднимите или ударьте могут повредить компоненты, размытие изображения или неправильное отображение.

Очистка

Отключите сетевой кабель. Регулярно очищайте корпус влажной тканью. Нейтральные моющие средства можно использовать. Не используйте сильные моющие средства или растворители (бензин или спирт) и абразивные. Лезвия скребков очищать с помощью ткани для очков или бумажки для лица. Будьте осторожны, чтобы не поцарапать линзу. Пожалуйста, регулярно используйте сетевую защиту для защиты фильтра электромотора, вентилятора и динамика устройства, иначе вентилятор будет заблуждён накоплением пыли, что приведёт к перегреву устройства и его выходу из строя.

Внимание к высокой температуре

Не разбейте проектор без необходимости, так как это может привести к риску электрического удара, что является намеренным оборудованием. Не устанавливайте на поверхности, которые выделяют или поглощают тепло.


Suitable for areas below 2000m altitude.

Please use in an ambient temperature of 0-35 degrees Celsius.

1

Познайте свой проектор


- 1. Выключатель
- 2. 2.85" Full HD камера
- 3. Индикатор
- 4. Индикатор
- 5. Выходной / Выходной
- 6. USB / USB
- 7. 1.15" ЖК
- 8. Сетевой порт
- 9. Выходной порт
- 10. Выходной порт
- 11. Индикаторный свет
- 12. Индикаторный свет
- 13. Слот для карт памяти
- 14. Слот для карт памяти

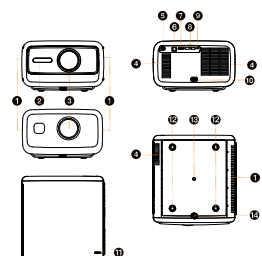

Note: The figure is a schematic diagram with different specifications and slightly different graphics. The layout interface will be different according to the different model, the model you have shall prevail.

2

Пульт дистанционного управления



- 1. Питание
- 2. Focus+
- 3. Down
- 4. V-/V+
- 5. Setting
- 6. Up
- 7. W/Right
- 8. V-/V+
- 9. Menu
- 10. Left
- 11. Return
- 12. Mute
- 13. Power
- 14. OK
- 15. Home
- 16. Source

Note: 1. The remote control must be on the front and rear of the projector, if facing the image the remote control sensitivity will decrease. 2. The remote control will be different as different model.

3

Расстояние проекции

Размер проекции

Смысл, на рисунке в следующей таблице, разместите проектор на требуемом расстоянии от экрана проекции в соответствии с заданным размером изображения.


Во время установки разместите проектор на прямой, гладкой столешнице или установите его на потолок. Область вокруг корпуса должна быть открыта, температура воздуха должна быть ниже 35°C, температура окружающей среды должна быть ниже 35°C.

Projection size (inch)	Projection distance (meter)
60	1.75
80	2.28
100	2.81

Note: The projection sizes and distance is for your reference.

Note:

In order that the projected image will not show geometric distortion (trapezoidal shape), install the projector vertically on the symmetry axis of the screen. See below.




The projector is placed on the right, the projection image will be small on the left and large on the right. The projector is placed on the left, the projection image will be large on the left and small on the right.

4

Методы установки

В зависимости от вашей рабочей среды и требований, проектор можно повесить вперед с помощью специального крючка/стойки на потолке или разместить на гладком столе и проецировать вперед на экран. Конечно, вы также можете использовать другие способы установки проектора в соответствии с приведенной диаграммой.



In the projection setting interface, select "Project" / switch

- When using the lifting method, the projector should not rise above the upper edge of the screen, otherwise, it will affect the effect of the image or the trapezoidal correction.
- Be sure to install the projector on the symmetrical axis line on the left and right sides of the screen to avoid causing trapezoidal distortion on the left and right sides of the image.

5

背面

3. After the installation of the projector should be well ventilated, there can be no object to cover or block the vent of the projector. 4. Please do not connect the power during the installation, to avoid electric shock risk or projector circuit failure. 5. The image may appear trapezoid distortion and/or at the first boot time, please refer to the "Correction of Images" section for adjustment.

Power on

Connect the power cord to the projector and press the OK button for 3 seconds; or press the remote control at the front / rear infrared window and press the "1" / "power" button to start the device. Shutdown: Long press the power button for 3 seconds; or point the remote control at the front / rear infrared window of the body, press "1" / "power" to select the shutdown after shutdown.

Image correction

Focus regulation

The image will automatically focus after power on or moving the projector. If the automatic focus does not reach the clearest state of the image, please press the remote control "F+" and "F-" keys to fine-tune until the image is adjusted to the clearest effect. You can enter SETTING to adjust Autofocus function, select PROJECTOR, select Auto Focus off.



6

Keystone

When the projector raises / lowers or side projection, the image will deform and distortion. You can select "SETTING" and PROJECTOR, then enter the correction in "4-point Trapezoid" or "4-side Trapezoid".



Note: When the tilt angle of the machine is too large, the definition of the image will decrease.

Interface operation instructions

How to go to the Source selection

Go to the home page, press the signal source button "1" on the remote control, select the required signal source channel, such as "HDMI", "USB", and press the OK key of the remote control to enter the corresponding signal source state.



How to connect WiFi

Enter the main interface, SETTING - ENTWORK-WIFI, find the network you want to connect to and press Confirm. Enter the password via the virtual keyboard and confirm the connection.

7




How to Play U-disk

Connect the USB with projector, press "1" on the remote, Enter the USB page, select Picture, Audio, Video, Store.




How to use Bluetooth

Enter the SETTING page, select "BLUETOOTH", Search and select the Bluetooth that you need to pair with.



How to Miracast with your Android Phone

1. Projector page select "Miracast"
2. Android phone: Enter the Setting page to select mirroring function, connect with the projector.



8

How to mirroring with your iPhone

1. The projector and your iPhone connect with same WiFi.
2. Projector: Enter to the APPS to find "AirScreen" or "TV Casting".
3. iPhone: Find mirroring function on your iPhone and connect with the projector.



How to work with Bluetooth Speaker

1. Projector: Enter the Apps and find "Blue Tooth Speaker"
2. Phone: Turn on the Bluetooth on your phone, connect "Projector BT" with projector



Dust cleaning

1. Clean the dust filter once every three months and replace the dust filter once every six months.
- Cleaning steps: shut off the projector, disconnect the power cord, remove the dust net from the bottom of the fuselage, blow the dust with the air dust, remove the dust and then install it into the projector. If the dust cannot be removed, a new dust filter must be replaced.



9

Simply Troubleshooting

The projector is easily working as TV generally will not encounter any problems, but may be due to the near by equipment or voltage reasons, some false fault, please remove the fault before repair, if the customer still can not eliminate the fault, please contact the relevant staff.

1. The power supply indicator light is not on.
- Whether the power supply plug is well inserted properly.
- Press the power button on the remote control cannot turn on.
- Whether the remote control battery is out of power.
- Whether by the strong light to illuminate the projector receiver.
3. The projection with out picture.
- Whether the signal source selection of the projector is correct.
- Whether the signal source is well inserted.
4. After the projection for a period of time, it automatically turns off.
- Whether the voltage is too low, or whether the voltage fluctuates too much.
5. Unable to read U-disk.
- Only support FAT 32, NTFS U disk format, if not the first two format, can change the format through formatting.
6. The picture is blurred.
- Please keep the picture at least 50inch or 1.5 meters away until the picture is clear.
- The range of autofocus is 1.5-3 meters, beyond this range, please manually focus.

Whether the remote control battery is out of power.

Whether by the strong light to illuminate the projector receiver.

Whether the signal source selection of the projector is correct.

Whether the signal source is well inserted.

Whether the voltage is too low, or whether the voltage fluctuates too much.

Only support FAT 32, NTFS U disk format, if not the first two format, can change the format through formatting.

The picture is blurred.

Please keep the picture at least 50inch or 1.5 meters away until the picture is clear.

The range of autofocus is 1.5-3 meters, beyond this range, please manually focus.

10

封底

成品尺寸: 90*145 mm, 157g铜版纸 彩印 折疊页