



# VAXIS AIR for LITECOMM User Guide



# Headset Icon



# Power On/Off



Multifunction Button


## Power On:

Press and hold the multifunction button until the blue light flashes.  
Hear the voice prompt " On."

## Power Off:

Press and hold the multifunction button until the red light flashes.  
Hear the voice prompt "Off."

# Wearing

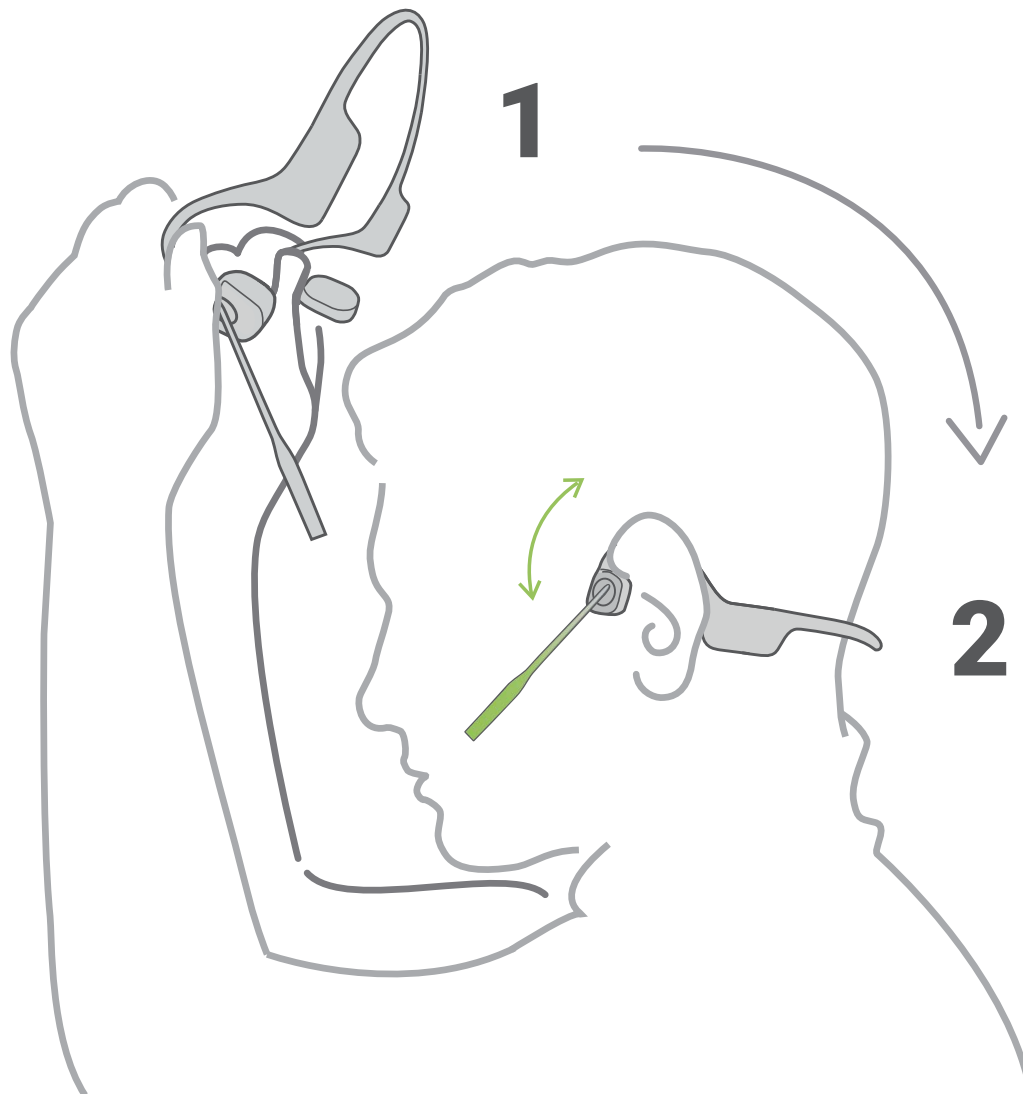

**Separate the headsets with both hands and wear them to the appropriate position.**

If you need to make a call, please lower the noise-canceling microphone and adjust it to the appropriate position.

# Mute Mode



Multifunction Button

## Operating Method:

1. Talk by rotating the noise-canceling microphone down and mute by rotating the noise-canceling microphone up.
2. Click the “multifunction button” and listen for the headset prompt “Mic Off” or “Mic On” to disable or enable the noise-canceling microphone for conversation.

# Volume Adjustment



## Operating Method:

Single-click the volume up button to increase the volume, and single-click the volume down button to decrease the volume. When the volume is too high, you will hear a "beep" sound as a volume reminder.

It's advised not to wear headsets at maximum volume for extended periods of time to avoid potential hearing damage.

---

# **Vaxis Litecomm Host Pairing**

# NFC Pairing



1. Long-press the NFC button on the main device until the screen displays the message "NFC On."



2. Place the NFC tag on the headsets in contact with the NFC button on the main device.





3. On the main device, the NFC icon in the upper right corner will turn green, wait for 1 to 3 seconds for the prompt indicating successful pairing.



4. The headset blue light being constantly on indicates a successful pairing.

---


# Pairing with Other Electronic Devices

# Bluetooth Pairing



Multifunction Button

1. In the power-off state, press and hold the "Multifunction Button" without releasing it.
2. Keep holding the "Multifunction Button" until the indicator light starts flashing red and blue alternately. This indicates that the headphones are now in pairing mode.

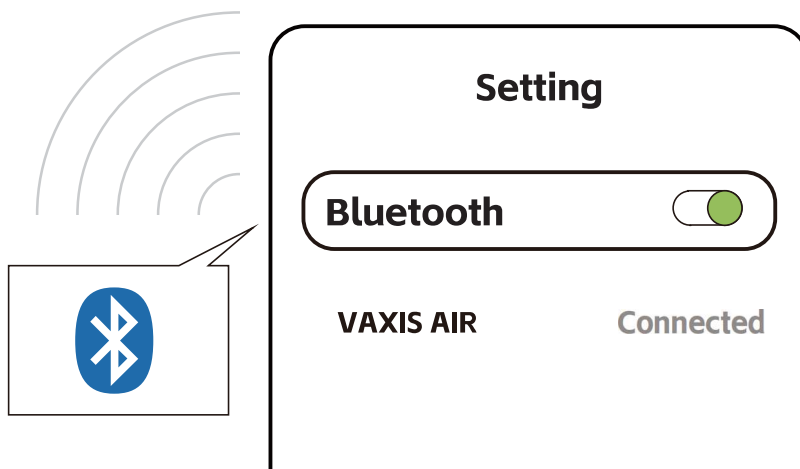

3. Open the Bluetooth settings on your device, select "VAXIS AIR," and you will hear a voice prompt saying "Connected."

# Mute Mode



Multifunction Button

▶|| **Play/Pause Music** ● ●

Double-click the Multifunction Button

☎ **Answer Call** ● ●

Double-click the Multifunction Button

📞 **End Call** ● ●

Double-click the Multifunction Button







📞 **Reject Call** ●

Long-press the Multifunction Button

📞 **Call Switching** ●

Long-press the Multifunction Button

# More Functions

Next Track	 Long-press "+" button
Previous Track	 Long-press "-" button
Volume Up	 Short-press "+" button
Volume Down	 Short-press "-" button
Call Volume Up	 Short-press "+" button
Call Volume Down	 Short-press "-" button

\*Other buttons complete other functions. The above part related to calls is only applicable to phone calls, not to voice calls or video calls made by third-party software.

# Check the Battery Level



This operation should be performed when the headsets are in standby mode and there is no audio playback.



## Operating Method:

In standby mode with no audio playback, a single press of the power/volume+ button or the volume- button will result in the headsets providing the battery level information through voice prompts.

Volume voice broadcast content: “High power/ Medium power/ Low power/ Please charge.”

---

# **Maintenance and Care**

# Charging Reminder



There is a power prompt of the headset on the main unit of the communication system. If the headset's battery is low, you will hear a prompt saying "Please Charge." At this point, you need to charge the headsets. There is a Type-C charging port located on the back of the volume button. Simply insert the Type-C cable to begin charging.

During the charging process, the LED indicator light turns red, indicating that the headsets are charging. The headsets will not turn off during the charging process. The headsets can be powered by the communication system's main unit in reverse. When the LED indicator turns blue, it indicates that the headset charging is complete.



# Technical Specifications

Bluetooth Specifications	Bluetooth v5.1
Frequency Range	2.4GHz-2.480GHz
Wireless Transmission Range	Approximately 20 meters
Supported Bluetooth Protocols	HSP HFP AVRCP A2DP SBC APTX APTX_LL APTX_HD
Built-in Lithium Battery	250mAh
Charging Voltage	DC+5V
Charging Operating Temperature	0~45°C
Charging Protection Cutoff Voltage	Approximately 6.0V
Full Charge Time	Approximately 40 minutes
Wireless Connection Auto Shutdown Time	10 minutes
Out-of-Range Auto Shutdown Time	10 minutes
Call Function	Yes
Interface	Type-C USB port
Continuous Talk Time	12hours
Standby Time	15days

# Storage and Maintenance

- The headsets should be stored in a cool and dry place.
- The operating temperature should be between 0°C to 45°C. Working in extremely cold, hot, excessively humid, or low-pressure environments may shorten the battery lifespan.
- Please keep the product away from heat sources, direct sunlight, flammable gases, or other liquids.
- Keeping the charging port dry before charging will reduce the risk of headset damage.
- Please clean the headsets with a soft dry cloth.
- After long-term storage, please recharge the headsets again before use.

## Note

If there are any design and specification changes, we reserve the right not to notify separately. For the latest company and product information, please visit [www.vaxisglobal.com](http://www.vaxisglobal.com)


## Warning

To avoid the risk of explosion, fire, or toxic chemical leakage, please do not disassemble the product or attempt to replace, deform, or damage the battery by yourself.

# Packing List




Box

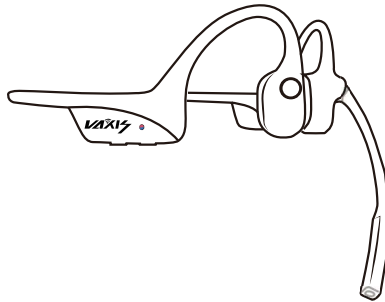

Vaxis Air Headset



Type-C Cable

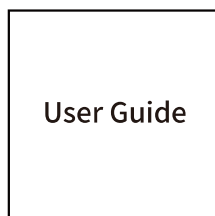

User Guide Card


**If there is any missing content in the above illustrations or if the product has any damage, please do not use it.**

Please contact the dealer where you purchased the product or contact us directly.

\*Please note that the packaging contents may vary due to regional differences in sales.

# After-sales Service

The product is covered by a one-year warranty for non-human damage-related malfunctions. For any further issues, please contact Vaxis official customer service.



If you need further assistance, please contact us  
Customer Service Hotline: 400-014-7080



# **VAXIS AIR** **for LITECOMM**